

MULTI CARRIER

HXF 3302 TELE



PARTS

UK

1th Edition 2020

 **GREENTEC**

Cutting Edge Technology

IMPORTANT INFORMATION

GreenTec HXF 3302T

PARTS 1th Edition – 2020

NOTICE: Please ensure that this manual is handed to the operator before using the machine for the first time. If the machine is resold, the Parts list must be given to the new owner!

The information contained in this Parts list is correct at the time of publication. However, in the course of constant development, changes in specification are inevitable. Should you find the information given in this book different to the machine it relates to please contact the “After Sales Department” for advice.



Merkurvej 25
DK 6000 Kolding
Denmark
Tel: +45 75553644
Fax: +45 75554243
Email: info@greentec.eu
web: www.greentec.eu

CONTENTS

CONTENTS	4
INTRODUCTION	5
USEFUL INFORMATION	6
ORDERING PARTS	7
SPARE PARTS	8
Mainframe	9
ADGT 1163/1235 Tele arm R/L cpl.	11
ADGT 1160/1234 Tele body R/L	13
ADGT 1162 Hoseguide	15
ADGT 1161 Tele arm	16
ADGT 1002 Break back	17
ADGT 1158 Kip cylinder	19
ADGT 1166 Head arm cylinder	20
Controlbox with cable	21
ADGT 1148 EL-valve	22
OPTE 6044 Counterweight (Option).....	24
ADGT 1370 Support leg	25
Stickers	26

INTRODUCTION

Dear customer!


Your new GreenTec machine is constructed with background in more than 20 years' experience with tractor-mounted machines to maintenance of green areas. This machine is produced by the latest technology and recognized safety regulations, standards and regulations.

We want to make a product available in such a way, that neither the use of the machine during transportation or maintenance of the machine causes any damage or misunderstandings.

This parts list contains information that are important and useful for maintaining your GreenTec machine's reliability, dependability and value.

You are welcome to visit our website www.greentec.eu - where the login via the dealer's access gives you the latest updates on instructional and part books on our entire product range.

We hope you will be pleased with your new GreenTec machine.

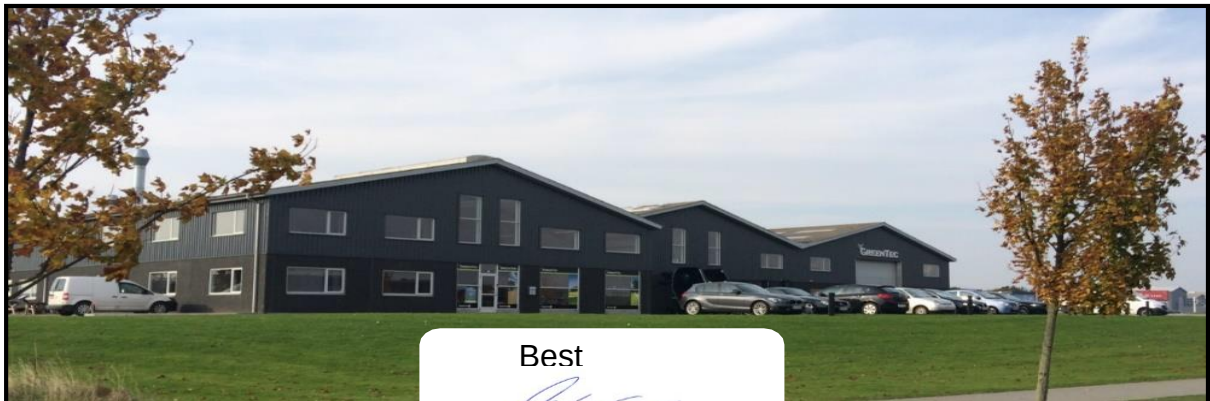

Best

A handwritten signature in blue ink, appearing to read "John Christensen".

John Christensen
SalesDirector GreenTec

GreenTec's vision is to develop and sell quality machines for the maintenance of green areas, including in agriculture, in industry, at airports and in the local sector. Through innovative product development, we will strive to become a leader in our field.

All machines are developed in a simple and functional design in close cooperation with dealers and end users. It is our goal to cover every need in the market segment with preferably two different solutions. In-depth analysis of requirements and serious advice to the customer is offered the best solution, where individual needs can be met through the modularity of the product program.

Our goal is also to offer the best possible after sales service, and a quick and efficient spare parts supply.

USEFUL INFORMATION

Before using the machine for the first time, it's the seller's responsibility that the buyer is given this parts list. If the machine is resold, the parts list must be transferred to the new owner.

Please fill out the list below to ensure that the necessary information is at hand when ordering spare parts etc.

Serial No	
Delivery date	
Dealer	
Tel/ fax	



Merkurvej 25
DK 6000 Kolding
Danmark
Tel: +45 75553644
Fax: +45 75554243
Email: info@greentec.eu
web: www.greentec.eu
Opening hours: Mon-Fri 8-16

ORDERING PARTS

When ordering parts please refer to your parts list to help your dealer with your order.

- **Part number and quantity**
- **Description**
- **Machine model number**
- **Serial number of the machine**
- **Delivery instructions (e.g. next day).**

Delivery is normally via carrier direct to your dealer. Please check with your dealer for stock availability and arrangement of dispatch. Ensure you or your dealer has sufficient cover for parts requirement outside factory hours.



Important Note:

The information contained in this manual is correct at the time of publication. However, in the course of constant development, changes in specification are inevitable. Should you find the information given in this book different to the machine it relates to, please contact the “After Sales Department” for advice.


Key:

LH: Left hand
RH: Right hand

SPARE PARTS

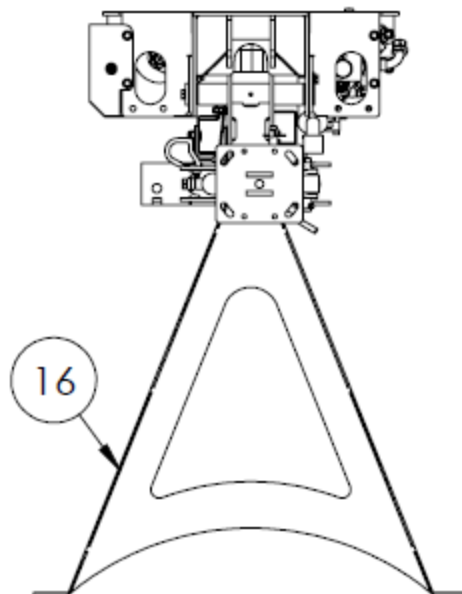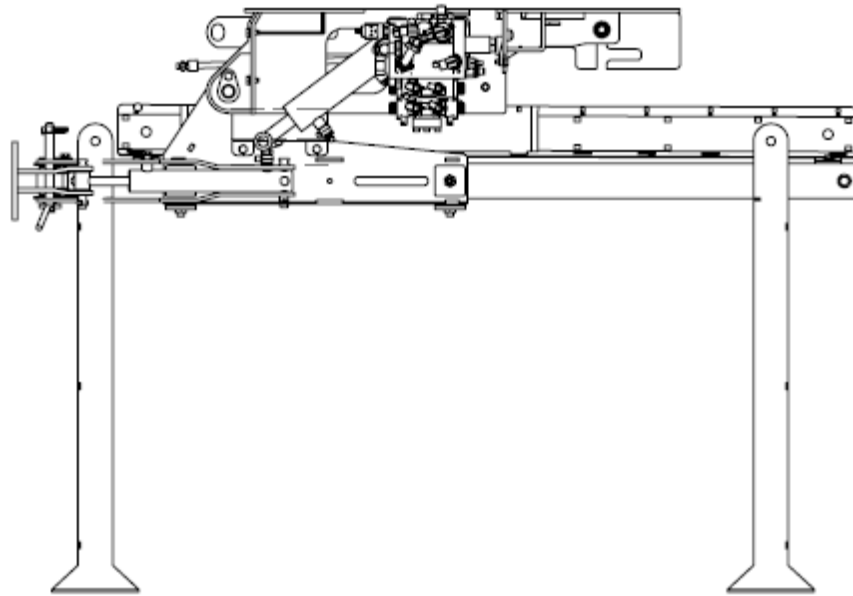


Mainframe

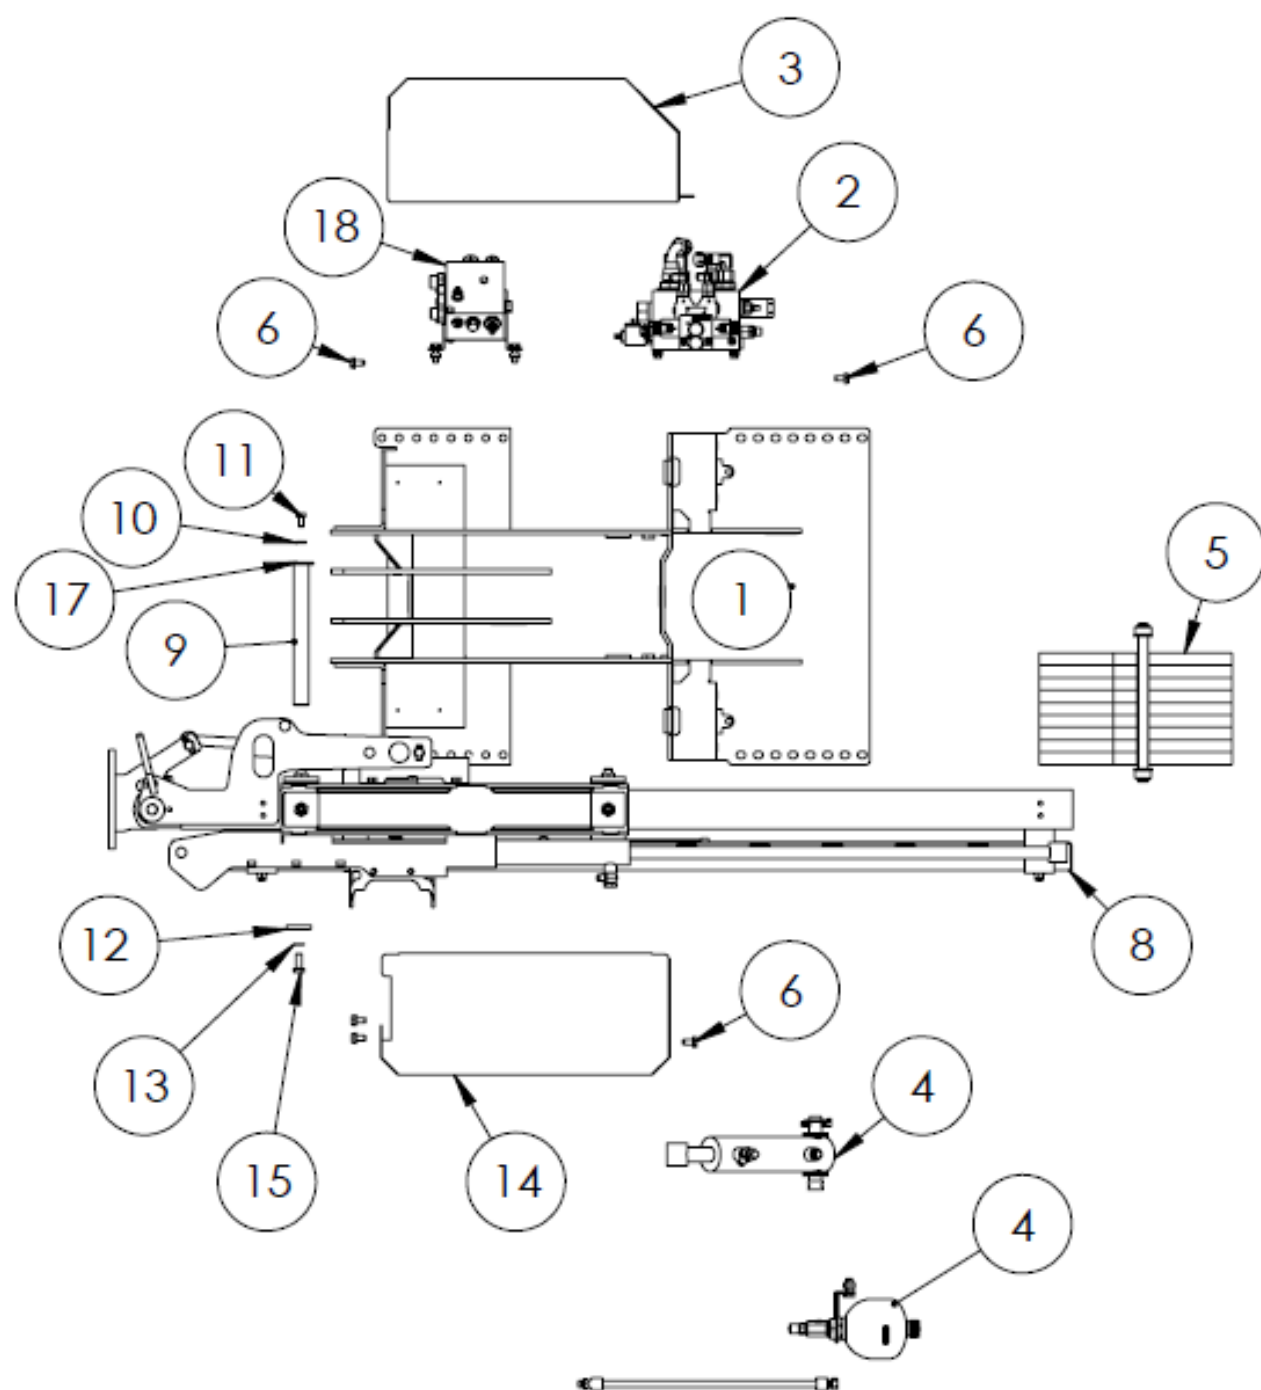


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8351501	Main frame	1
2	ADGT1148	Complete el-valve	1
3	6701638R	Cover R	1
3a	6701638L	Cover L	1
4	ADGT1002	Break back	1
5	OPTE6044	Counterweight	1
NS	ADGT1226	Hosesæt	1
7	8222035	Bolt	6
8	ADGT1163	Tele arm complete R	1
8a	ADGT1235	Tele arm complete L	1
9	8351503	Pin	1
10	8222003	Washer	1
11	8222002	Bolt	1
12	8290007	Washer	1
13	8222013	Washer	1
14	8351004	Cover R	1
14a	8351007	Cover L	1
15	9040185	Bolt	1
16	ADGT1370	Support legs cpl.	1
17	8222024	Washer	1
NS	6703027	Hose protection	1.0
NS	65.042.20	Hose protection	3.5

ADGT 1163/1235 Tele arm R/L cpl.

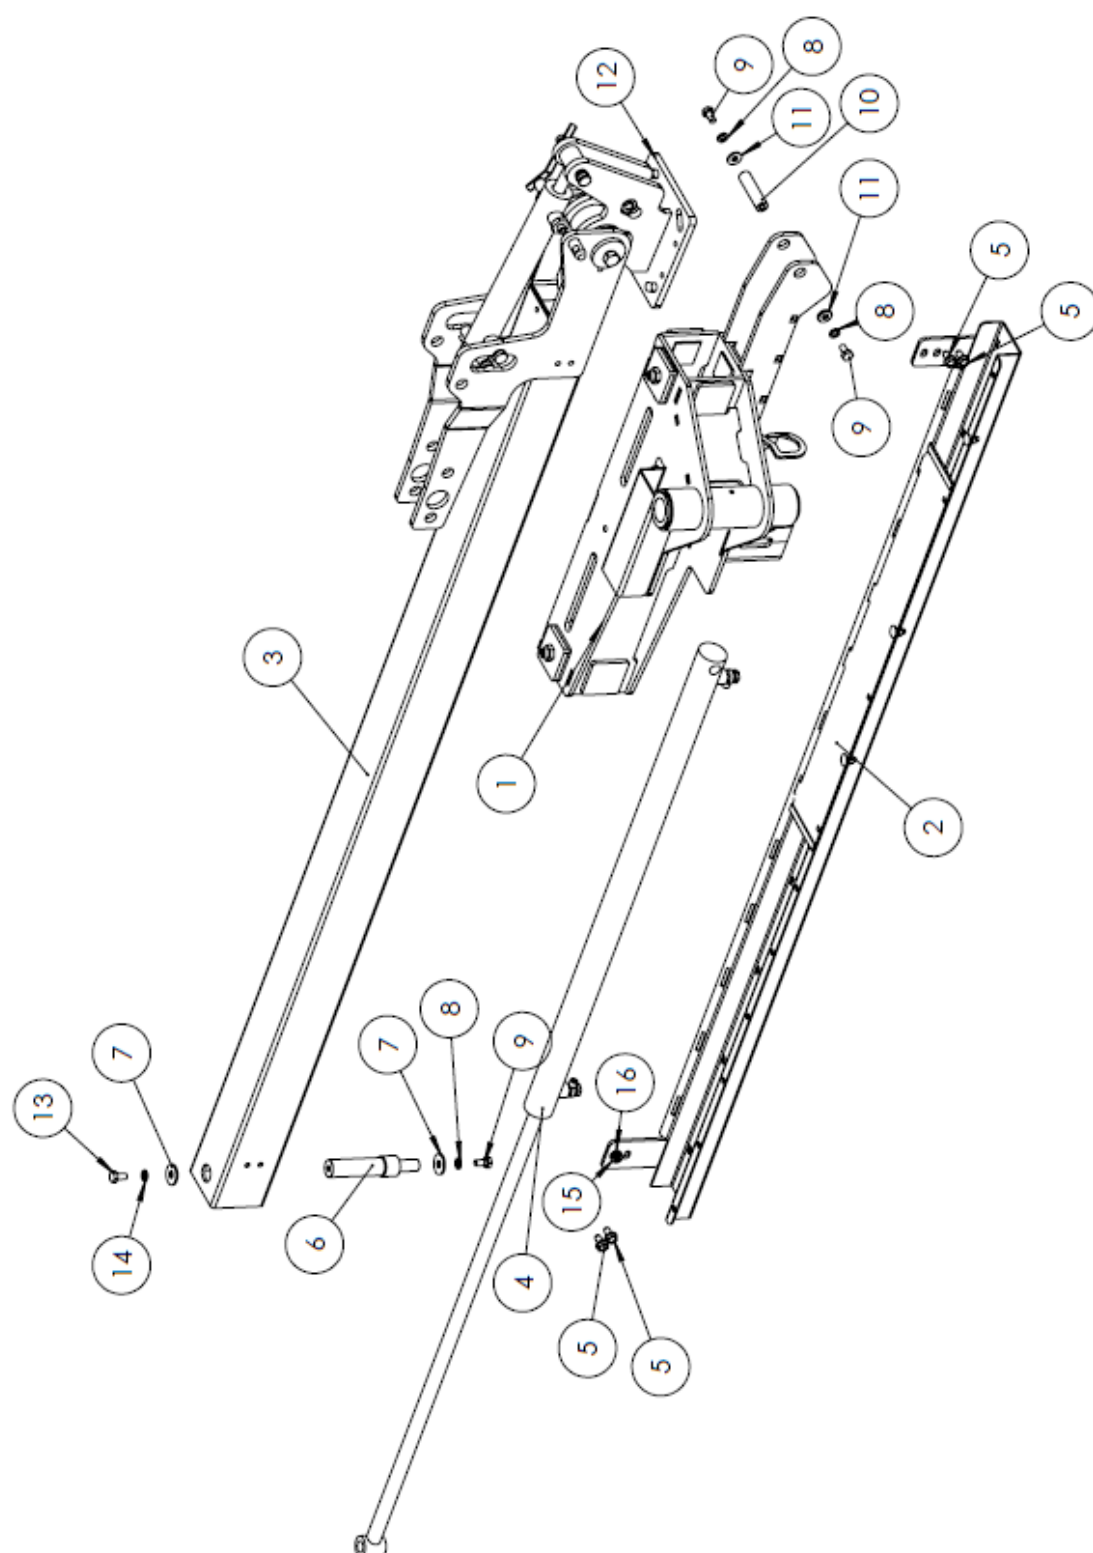


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	ADGT1160	Tele body R	1
1a	ADGT1234	Tele body L	1
2	ADGT1162	Hoseguide	1
3	ADGT1161	Tele arm	1
4	ADGT1166	Cylinder	1
5	8222035	Bolt	4
6	6701644	Pin	1
7	6701599	Washer	2
8	8222003	Washer	3
9	8222002	Bolt	3
10	6701597	Pin	1
11	8142003	HD washer	2
12	8351502	Head crowd bracket	1
13	9040239	Bolt	1
14	8222005	Washer	1
15	8222003	Washer	4
16	8222024	Washer	4

ADGT 1160/1234 Tele body R/L

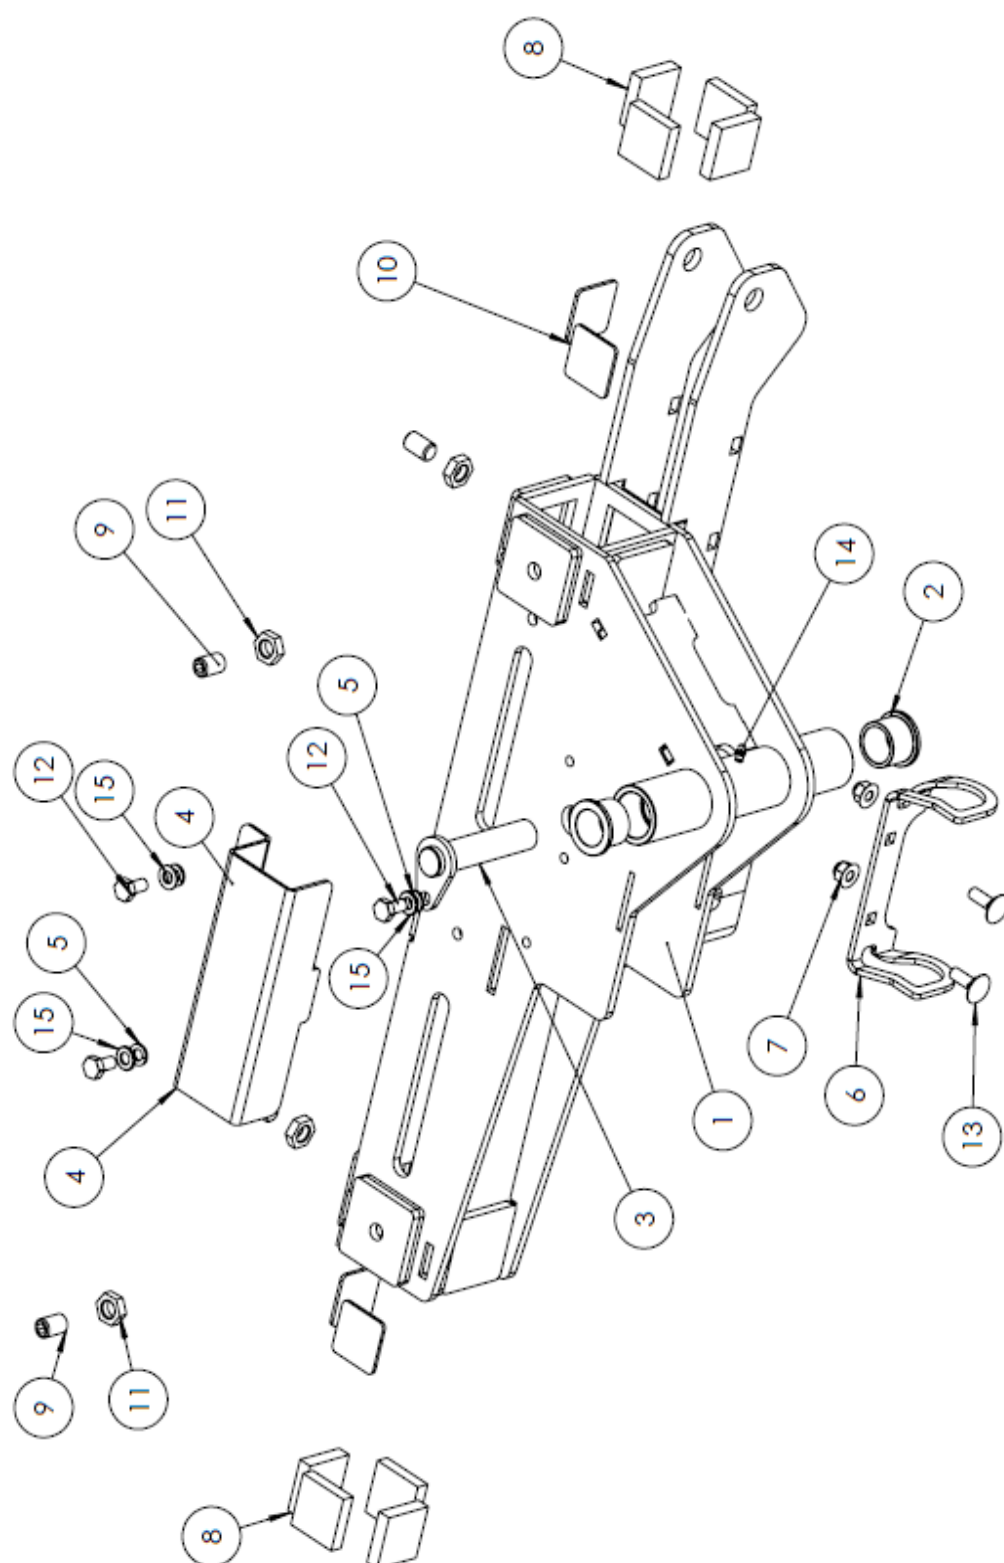


TEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	6701603/6701654	Head crowd bracket R/L	1
2	8354001	Plastbushing	2
3	6701609	Pin	1
4	6701596	Hoseholder	1
5	8222003	Washer	3
6	6701589	Hoseholder	1
7	6701575	Lock nut	2
8	6701592	Wearpads	8
9	81822007	Pinol	4
10	6701591	Plate	4
11	6701712	Nut	4
12	8222002	Bolt	3
13	6701652	Bolt	2
14	8222027	Greasenippel	1
15	8222024	Washer	3

ADGT 1162 Hoseguide

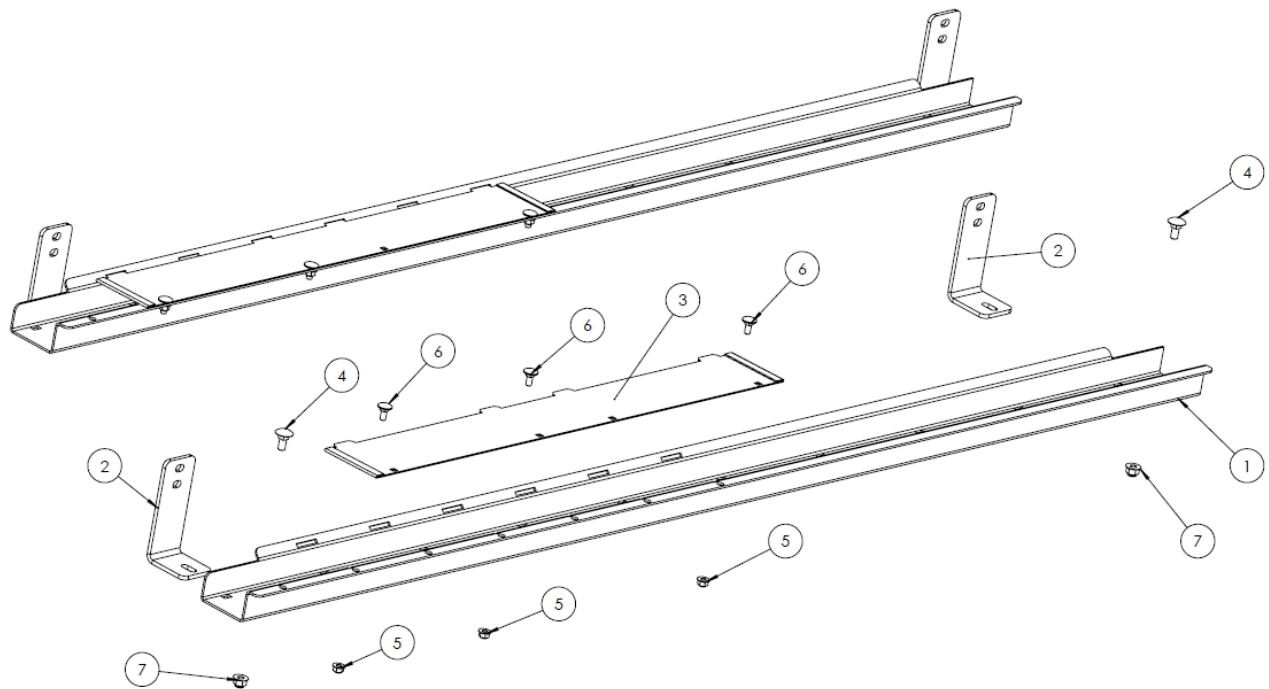


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	6701586	Hoseguide	1
2	6701646	Holder f/hoseguide	2
3	6701590	Cover f/hoseguide	1
4	8222022	Bolt	2
5	9040190	Nut	4
6	6701711	Bolt	4
7	6701575	Nut	2

ADGT 1161 Tele arm

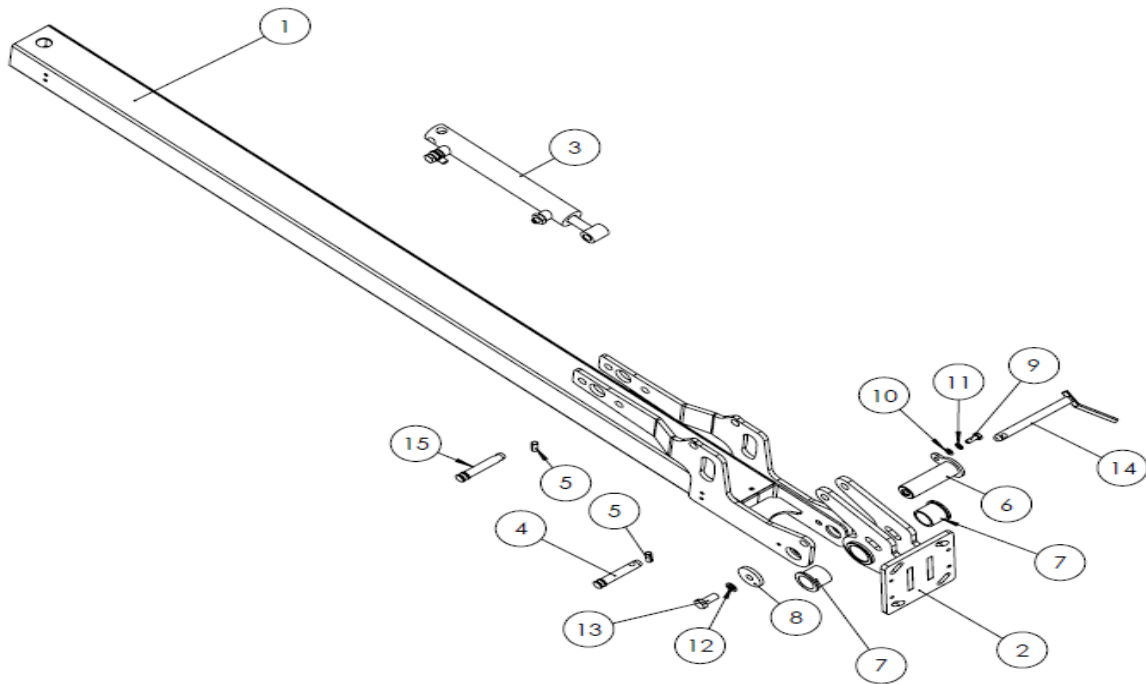

EM NO.	PART NUMBER	DESCRIPTION	QTY.
1	6701606	Tele arm	1
2	8351502	Head bracket	1
3	ADGT1158	Cylinder	1
4	6310202	Bolt	1
5	6701549	Dowel pin	2
6	8351504	Pin	1
7	8354001	Bushing	2
8	8351006	Washer	1
9	8222002	Bolt	1
10	8222024	Washer	1
11	8222003	Washer	1
12	8222013	Washer	1
13	9040185	Bolt	1
14	8290051	Bolt with handle	1
15	8286002	Bolt	1


ADGT 1002 Break back

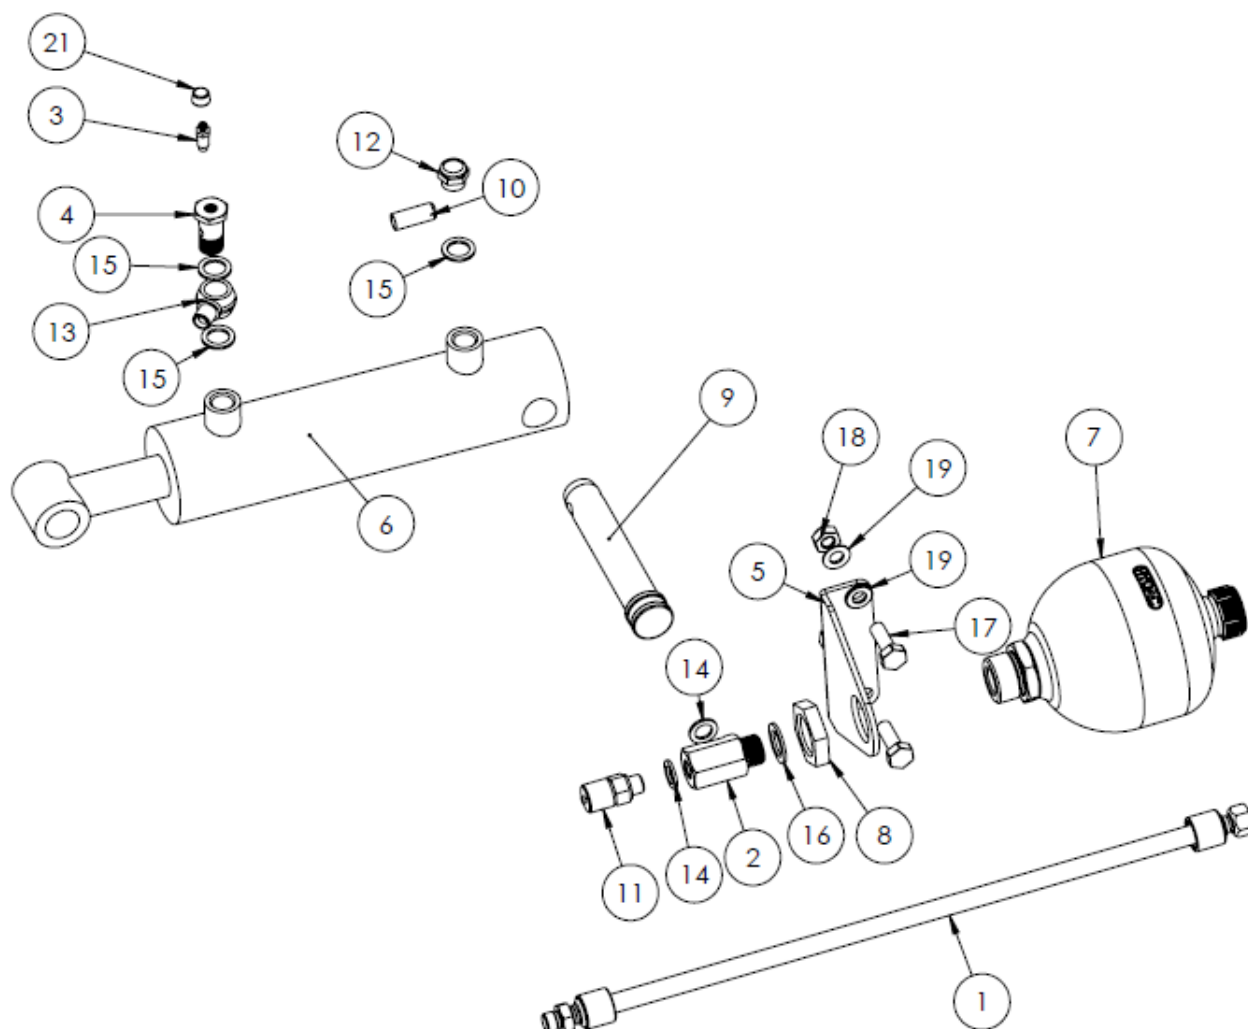

1. Fill the accumulator with nitrogen (pressure 32 bar)
2. Hydraulic fittings install with loctite.
3. Accumulator and cylinder is coupled together with the hose.
4. Cylinder is placed so that breathing screw (pos 3) is the highest point. Fill hydraulic coil through test nipple (pos 11) until no air is in system.
5. Tighten the breathing screw (pos 3) and filled until pressure 50bar


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	6701718	Hose for break back "incl in ADGT1226"	1
2	8290022	Nipple	1
3	8290023	Breather	1
4	8290024	Fitting	1
5	8351011	Bracket	1
6	8283017	Ram	1
7	6703005	Accumulator	1
8	6702005	Lock nut	1
9	8290031	Bolt	1
10	6701549	Lynch pin	1
11	6703007	Testnipple	1
12	6703013	Filter plug	1
13	6703011	Banjo bolt	1
14	8143005	Bounded seals	1
15	6703003	Bounded seals	2
16	6703010	Bounded seals	1
17	8222001	Bolt	2
18	8222023	Lock nut	2
19	8222024	Washer	4
21	8290025	Cover for breather	1

ADGT 1158 Kip cylinder

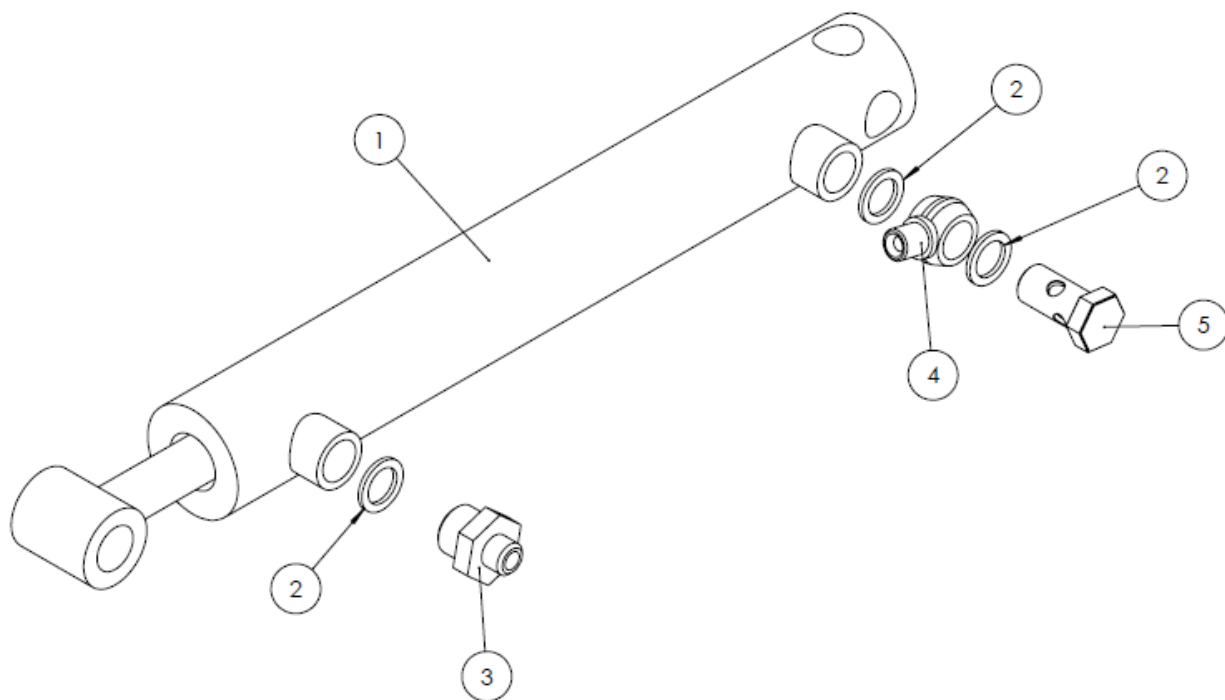

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8353001	Ram	1
2	6703003	Bounded seals	3
3	81823005	Nipple	1
4	6703011	Banjo	1
4	6703012	Banjobolt	1
NS	6701720	Hose for Kip cyl. Long "incl. in ADGT1226"	2
NS	6701721	Hose for Kip cyl. Short "incl. in ADGT1226"	
NS	6703027	Protection "incl. in ADGT1226"	1

ADGT 1166 Head arm cylinder

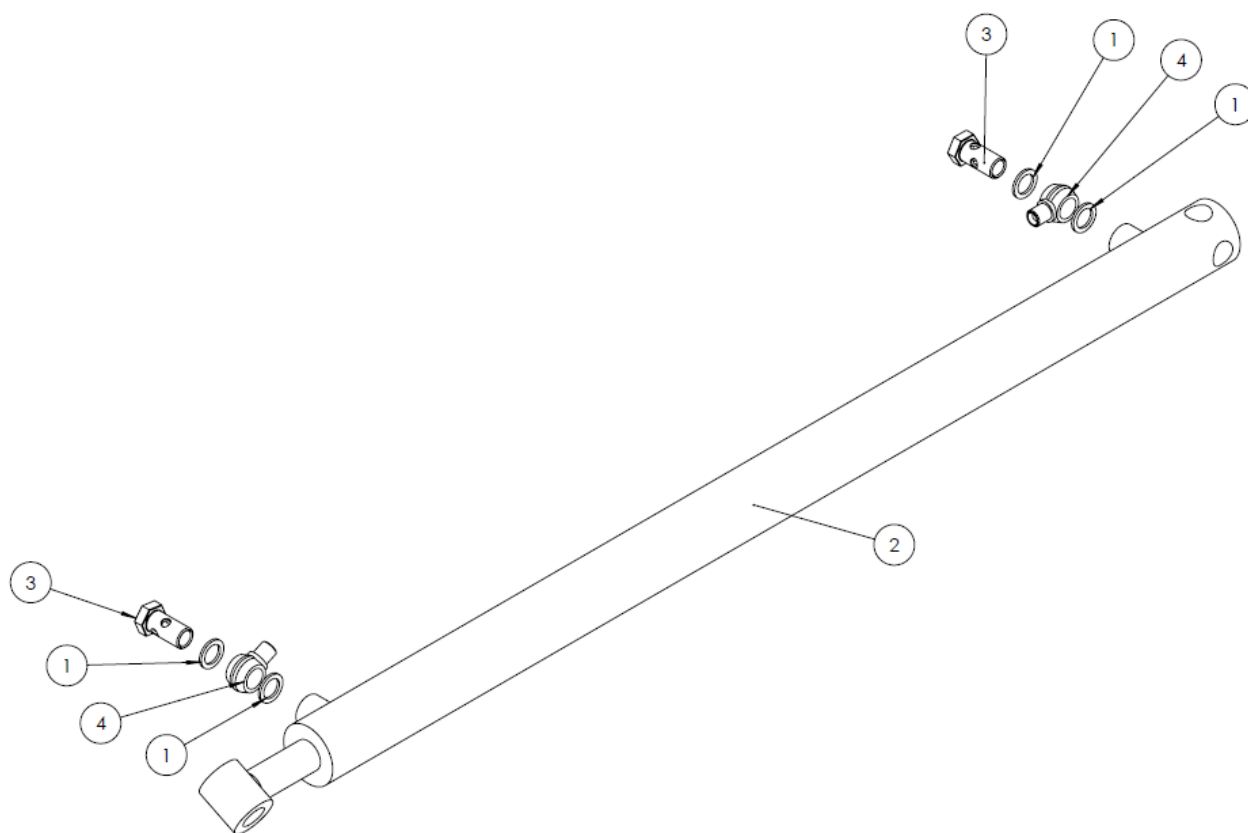


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8143005	Bounded seals	4
2	6701640	Ram	1
3	6703003	Banjobolt	2
4	6703004	Banjo	2
NS	6701716	Hose for Head arm cyl. Long "incl. in ADGT1226"	1
NS	6701717	Hose for Head arm cyl. Short "incl. in ADGT1226"	1

Controlbox with cable




ITEM NO	PART NUMBER	DESCRIPTION	QTY
1	6708001	Controlbox W/10Mtr Cabel	1
2	6708006	Cable for valve	1
NS	6708004.2	Extension cabel 6Mtr.	1

ADGT 1148 EL-valve

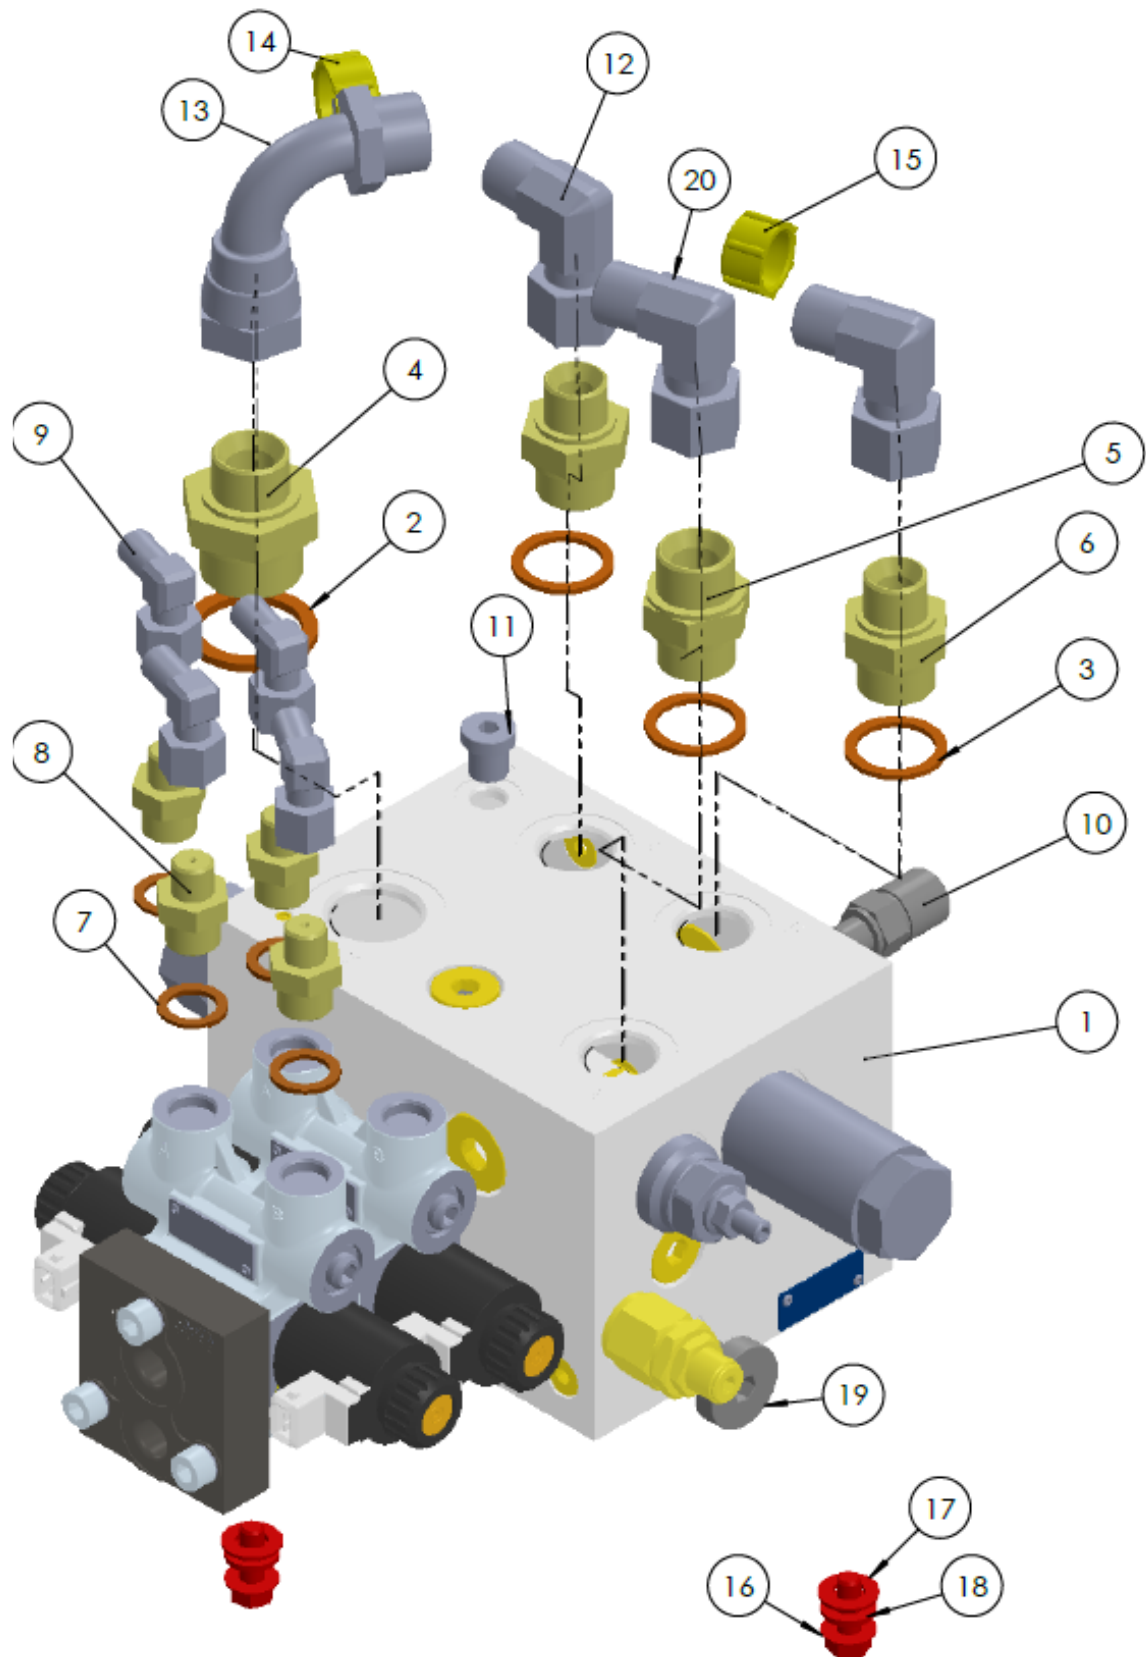


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	6701647	Valveblock	1
2	8290034	Bounded seals	1
3	8283011	Bounded seals	3
4	8290035	Nipple	1
5	8283009	Nipple	1
6	8283010	Nipple	2
7	6703003	Bounded seals	4
8	6703002	Nipple	4
9	81823010	Vinkel	4
10	6703007	Mini mesh	1
11	6701987	Plug	1
12	8290036	Vinkel	2
13	8283013	Nippel	1
14	R34	Plug	1
15	R12	Plug	1
16	6702001	Bolt	2
17	8222003	Washer	2
18	8222024	Washer	2
19	6701988	Plug	1
20	8290037	Vinkel	1

OPTE 6044 Counterweight (Option)

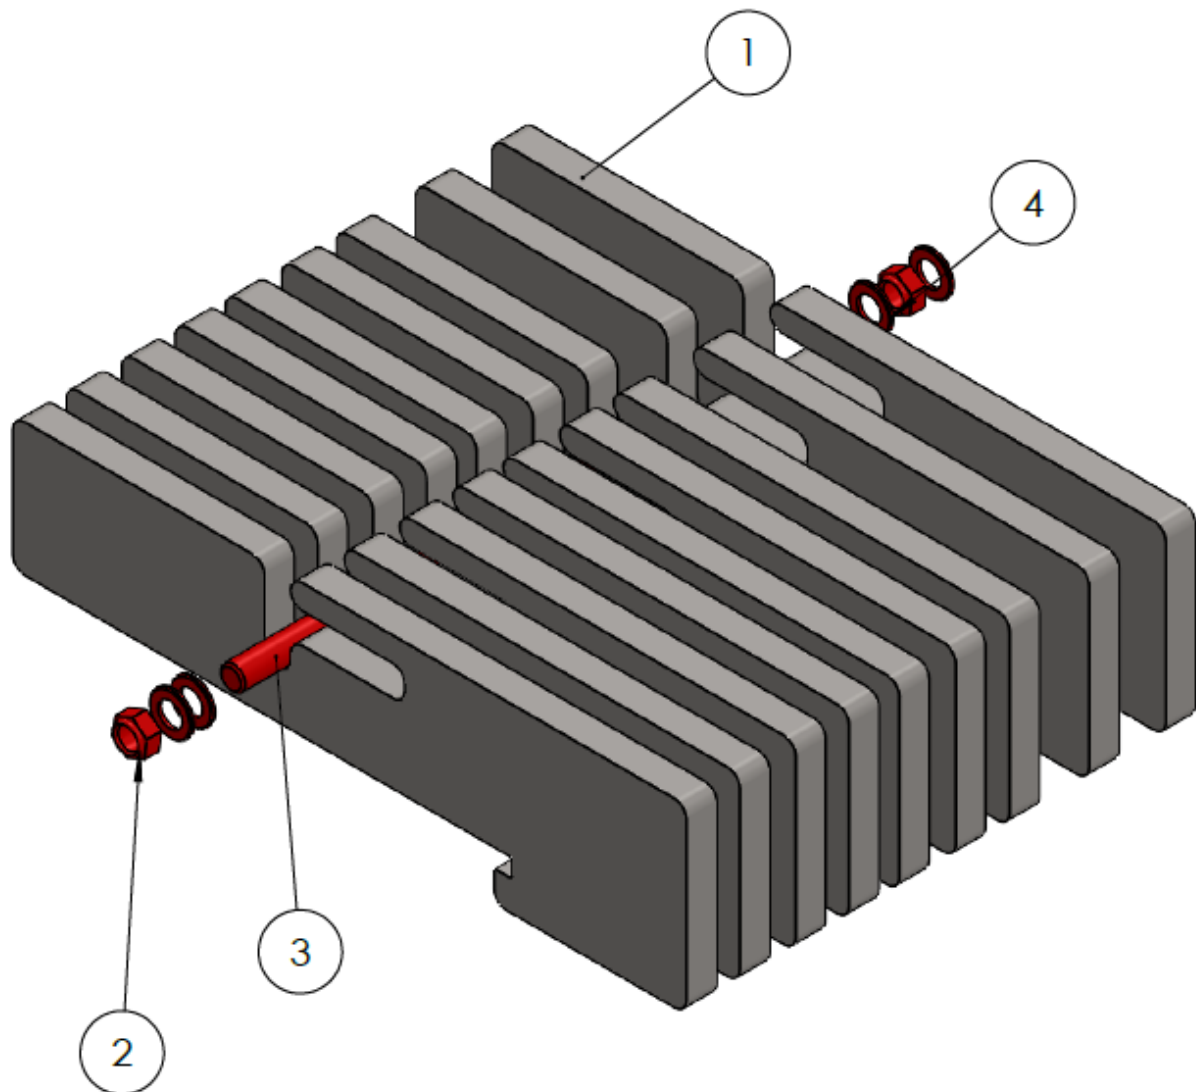

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8351010	Counterweight	9
2	8352002	Threaded rod	1
3	9040183	Washer	4
4	9040182	Nut	2

ADGT 1370 Support leg

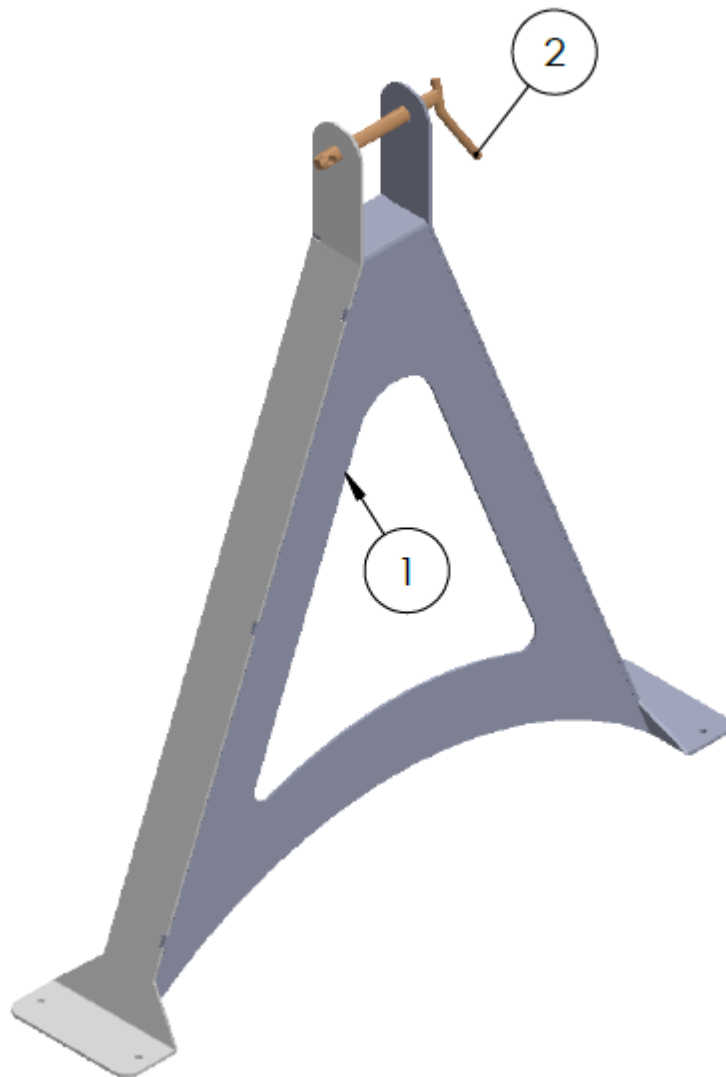


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	6702023	Support leg	1
2	8290051	Bolt	1

Stickers



HXF 3302 TELE klistermærke top – 530 x 113 mm

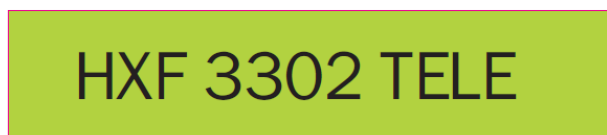


HXF 3302 TELE klistermærke bund – 530 x 113 mm



HXF 3302 TELE advarselsmærker – 250 x 88 mm



8770296 – 45 x 112 mm



8770322 Smørring – 50 x 24 mm



GreenTec_Påbudsmærker – 130 x 25 mm



Made in denmark – 50 x 16 mm

HXF 3302 TELE KITS

6701696_Rev01

NO.	PART NUMBER	DESCRIPTION	QTY.
1	6701696	Stickers kits HXF 3302T cpl.	1



Merkurvej 25 | DK-6000 Kolding | Tel.: +45 75 55 36 44 | info@GreenTec.eu | www.GreenTec.eu

Cutting Edge Technology